

INSTRUCTION MANUAL

TILT TOP TABLE



By Scholten & Baijings

HAY

INTRODUCTION

Based on a traditional type of Dutch table from the 1700s, HAY's Tilt Top Table transcends generations by bringing this classic design right up to date. Due to tight living space, the table was originally designed to fold together to create extra space when packed away. In the same way, the Tilt Top Table functions as a dining table or working area, and can be folded completely flat against the wall when not in use. Ideal for compact space or as a convenient spare table that can easily be stored away.

CARE AND MAINTENANCE

CAUTION

With a little care you can prolong the life of your furniture. Follow the instructions for the materials of your specific product to make sure that it stays in the best shape for as long as possible.

The information below is only intended as a general guideline. For more information on how to remove specific stains, please enquire where you bought the furniture.

- Always remove stains quickly before they can do any permanent damage to the furniture.
- Avoid placing the furniture in direct sunlight or near a strong heat source to reduce changes. As wood is a natural material, it will change in colour and will patinate over time.
- When you move your furniture, make sure you lift it rather than pulling or pushing it to avoid damaging the floor, legs and mountings.
- Tighten up the screws after one to two months' use and whenever required.
- Use coasters under damp, hot or coloured objects to avoid permanent stains.
- Be careful not to scratch or damage the surface with sharp objects.
- Avoid partially covering the surface, for example with tablecloths, or place mats, as colour variances may appear.


LACQUERED OR STAINED WOOD

- Wipe with a clean cloth wrung in water or in a solution of water and a neutral detergent. Remove soap residue immediately using a clean, dry cloth.
- If the surface is scratched or appears matt, use a care product especially suited to lacquered or stained wood.
- Avoid using detergents containing silicone, as they seal the stain in and make subsequent repairs more difficult.
- Avoid using scouring cream or scouring pads, as they may scratch the surface.


POWDER COATED STEEL

- Wipe with a clean cloth wrung in water or in a solution of water and a neutral detergent. Remove soap residue immediately using a clean, dry cloth.
- Avoid using scouring cream or scouring pads, as they may scratch the surface.
- White spirit (mineral spirit) can be used to carefully remove stains from chromed surfaces.


PARTS

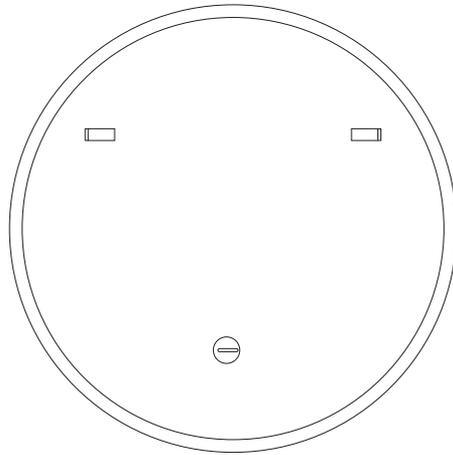


A x 1

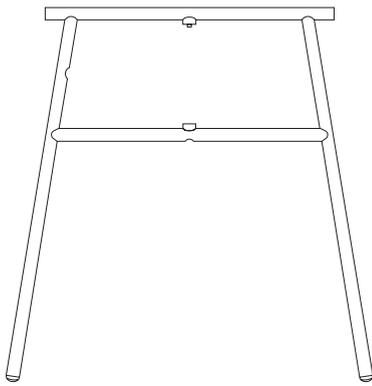

B x 1

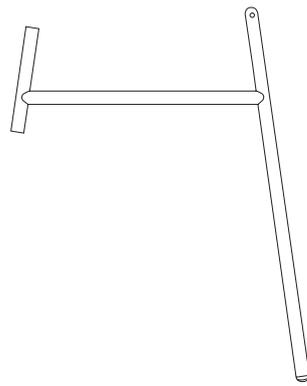

C x 1

 


D x 1




E x 2



 F x 2





G x 4

 

H x 1


1.

While assembling, keep the table inside the cardboard box to protect the tabletop from scratches etc. Make sure that all parts are included.

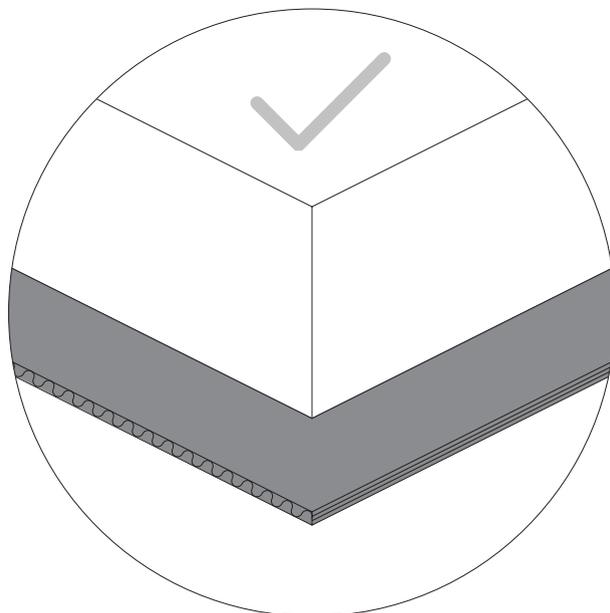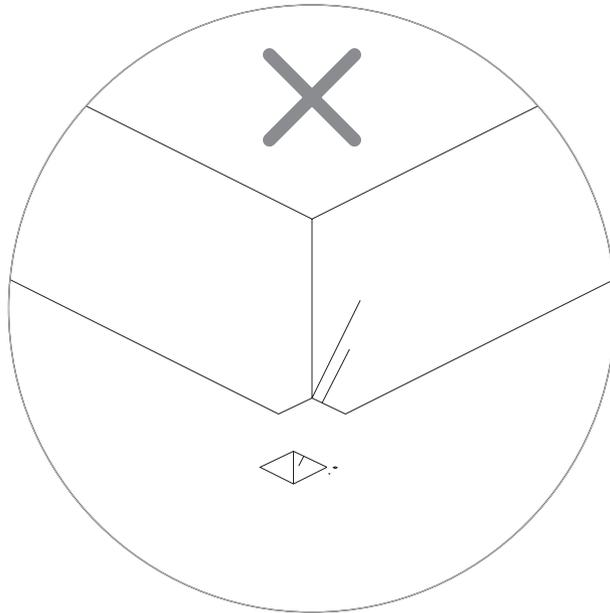


2.

Hold parts B and C in an upright position.

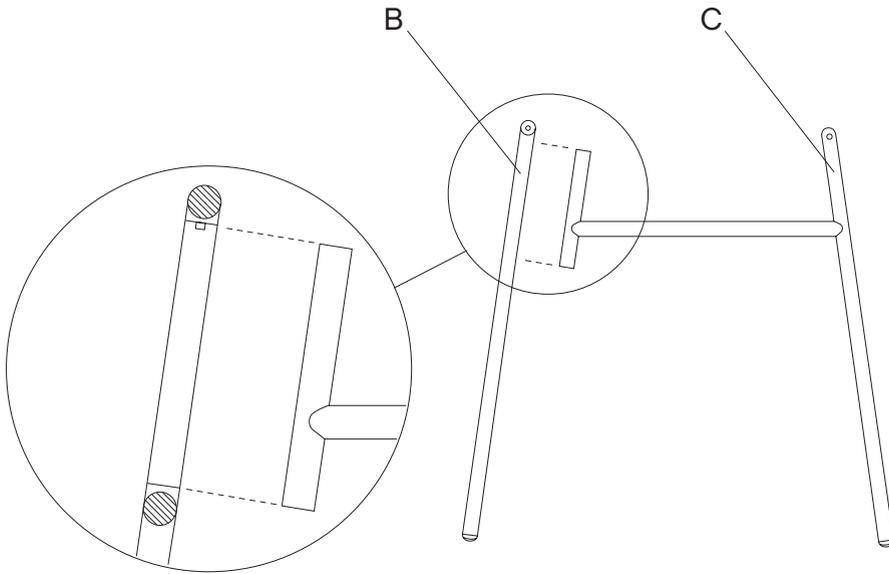


3.

Place G over C's pin before inserting B.

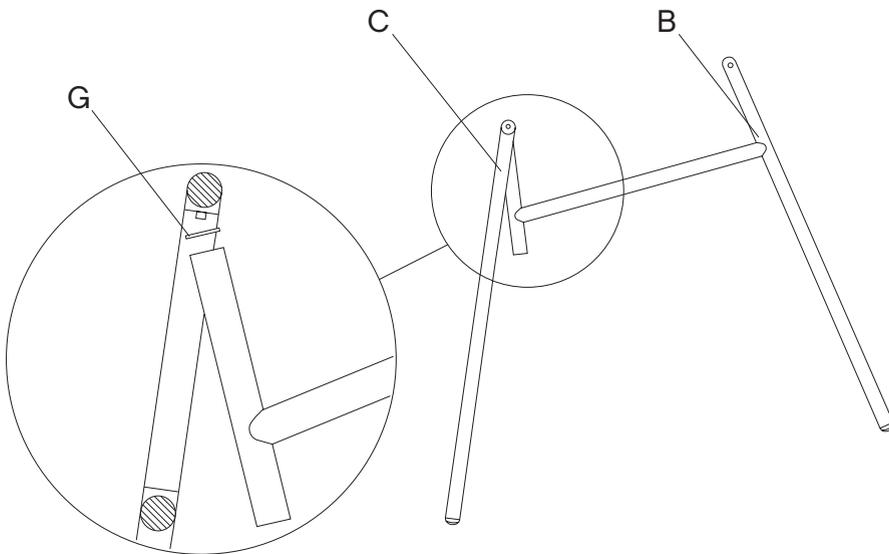


4.

Place G on the other side of B before sliding B and G together.

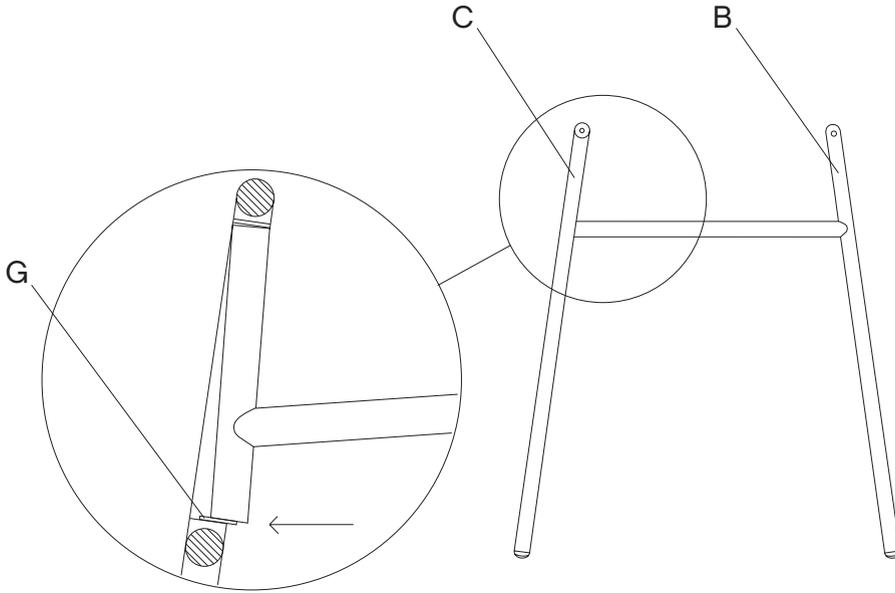


5.

Use D to tighten frame B to C.

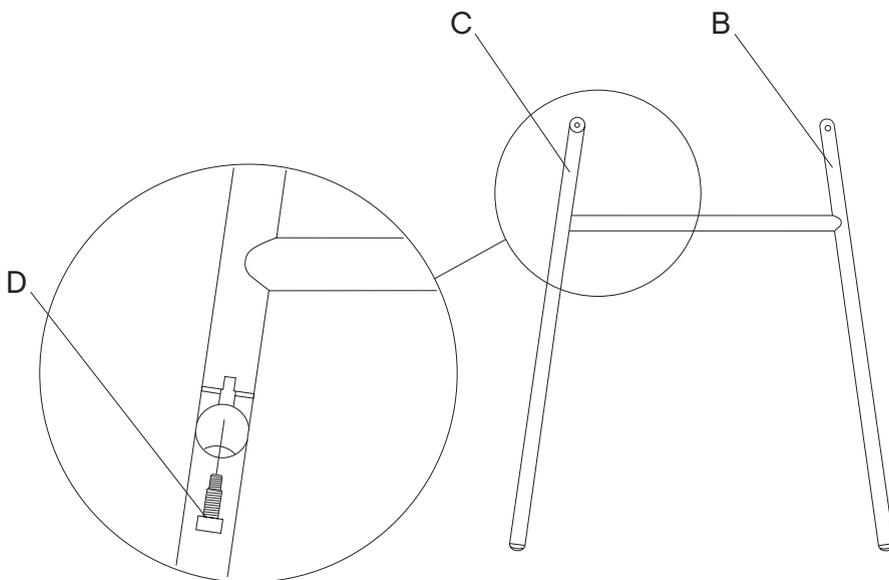


6.

Insert 2 x G between A and B frame.

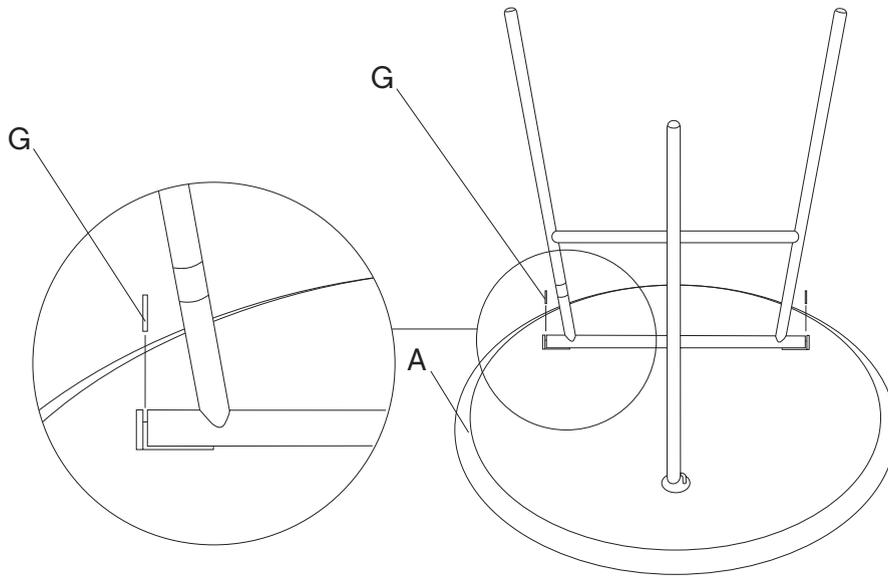


7.

Press 2 x F in the end holes of B frame.

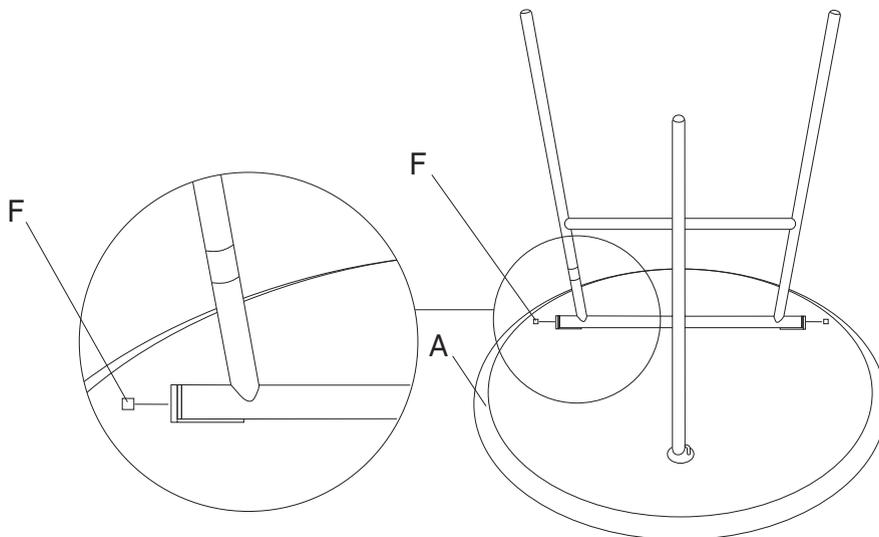


8.

Use 2 x E to tighten the frame to the tabletop.

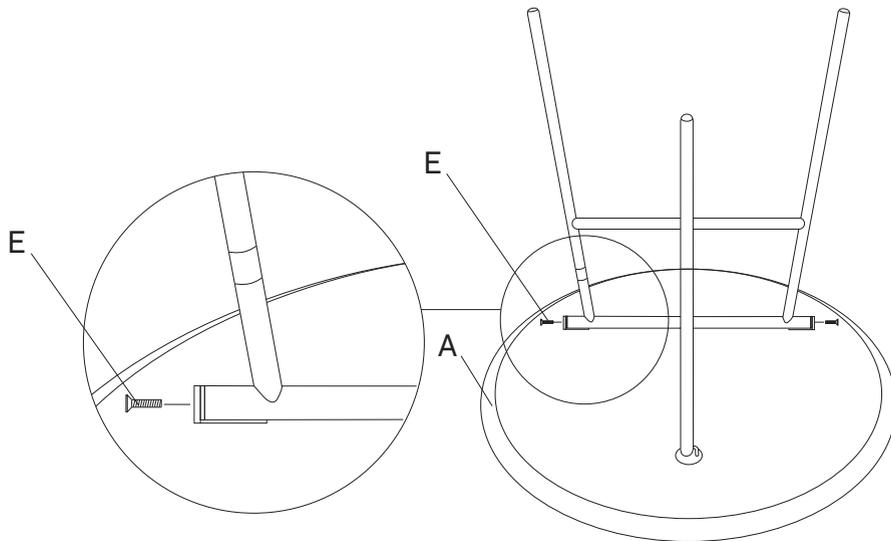

9.

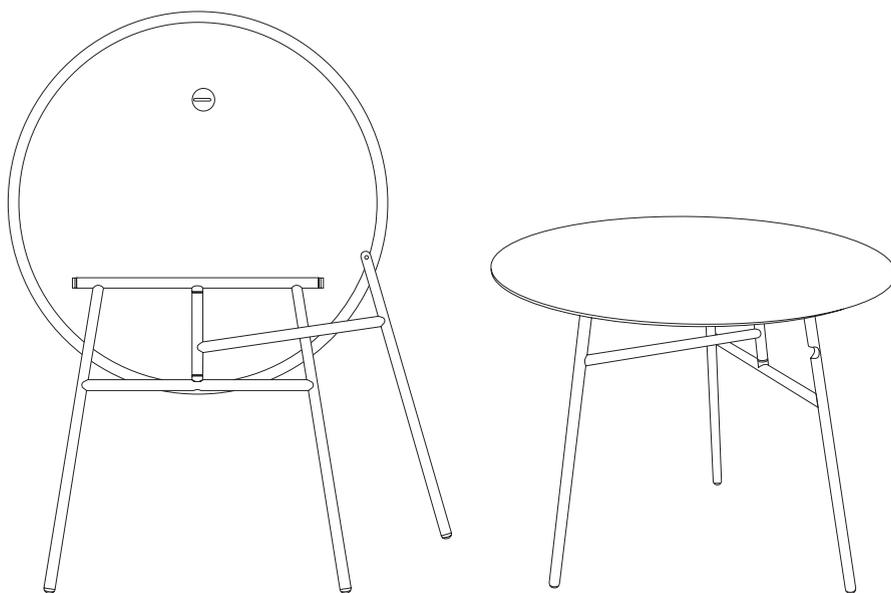

Havnen 1 8700 Horsens Denmark
+45 4282 0282 / hay@hay.com

HAY

ITEM NO. 706381

