


Assembly Instruction

7100010 COAT RACK FLAVI



STEP1

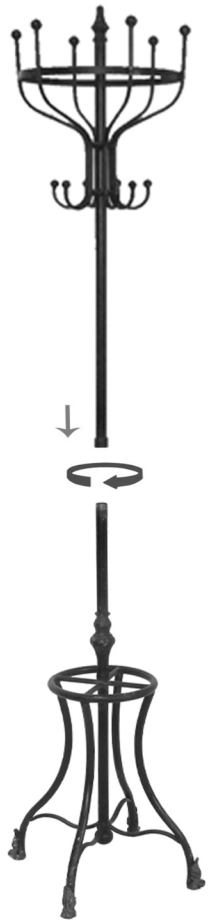

STEP2



A:1PC



B:1PC